ELECRAFT N-GEN WIDEBAND NOISE GENERATOR

Rev C, Feb. 3, 2004

The Elecraft N-gen is a wideband noise source that is useful for a variety of receiver alignment tasks. It can be used in conjunction with a software program such as Spectrogram to align IF filters in the K2 or in other receivers. It can also be used to align the RF stages in Elecraft XV Transverters or other HF, VHF, and UHF equipment. **Note:** The N-gen does not generate repetitive pulse noise, so it cannot be used to test pulse-type I.F. noise blankers such as the Elecraft KNB1 or KNB2.

The N-gen can be powered either from its internal 9-volt battery, or from an external source. A red LED is provided to indicate that the unit is operating.

Specifications

Power Requirement Current Consumption Excess noise output Bandwidth	9V battery or external 12 to 15 volts DC approximately 25 ma. approximately 35 dB (typical; varies with characteristics of D2) output level is +/- 3 dB from 100 kHz to 500 MHz
Assembly	
☐ Perform an inventory	of all parts in the kit (see Parts List on page 2).
☐ Install R1 (200_), R2 (150_), R3 (1K_), R4 (47_), and R5 (560_) in the positions indicated on the P board silkscreen.	
	dling semiconductors in the following steps (diodes and MAR-1 ampflier wrist strap or touch a grounded metal surface often during assembly.
☐ Install D1 and D4 (1N4148) in the indicated positions. The diodes must installed in the correct direction. The banded end of the diode is to be inserted into the hole with the square pad. D1 and D4 are 1N4148 diodes and are very similar in appearance to D2 a 1N5235B. If necessary, use a magnifying glass to identify the diodes.	
☐ Install zener diode D2	(1N5235B).
Install 0.01uF (103) m mono cap at C4.	nono caps at C1, C2; a 0.047uF (473) mono cap at C3; and a 10pF (10J or 100)
	The longer lead goes to the square pad. Two locations are marked as D2 on location in the upper right corner should have been designated as D3.
Align this lead toward	U1. Note that the MAR-1 has one lead cut at a slant. This is the input lead. I the center of the board as indicated on the silkscreen. The body of U1 will fit the center of its pattern.
☐ Install J1, J2, and SW1.	
☐ Install the battery holder. Use 4-40 x _ inch pan head machine screws, lock washers and nuts. ☐ Install the 4 mounting feet in the corners on the underside of the PCB.	

Test

CAUTION: Whenever you use the N-gen with a transceiver, you must prevent accidental transmit, which could damage parts on the N-gen. Disconnect all keying devices (key, paddle, microphone). Reduce the transceiver's power level to the lowest possible. In the case of a K2, rotate POWER fully counter-clockwise.

Install a standard 9-volt battery into the battery holder.
If you plan to test the N-gen using a transceiver, disable transmit as described above.
Connect the N-gen to the antenna input of a receiver or transceiver.
Place SW1 in the "ON" position.
The LED should light and there should be a substantial increase in the noise output of the receiver.

Parts List

Note: Resistor color codes and typical capacitor markings are shown in parentheses.

R1, 200 ohms 1/4 watt (red, black, brown)

R2, 150 ohms 1/4 watt (brown, green, brown)

R3, 1000 ohms 1/4 watt (brown, black, red)

C1, C2, .01uF mono ceramic (103)

C3, .047uF mono ceramic (473)

C4, 10 pF ceramic (10J or 100)

S1, Miniature DPDT Switch

J1, 12 volt power connector

J2, BNC output connector

N-gen PC board

R4, 47 ohms 1/4 watt (yellow, violet, black)

R5, 560 ohms 1/4 watt (green, blue, brown)

D1, D4, 1N4148

D2, 1N5235B

D3, Red LED

U1, MAR-1 MMIC


(2) 4-40 pan-head machine screw

(2) lock washer

(2) 4-40 nut

(4) rubber feet

Circuit Details

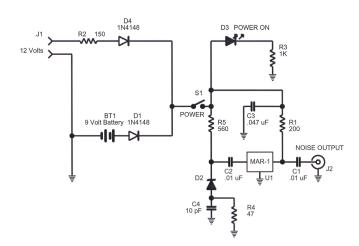

The schematic of the N-gen is shown above. Noise generated within Zener diode D2 is amplified by wideband monolithic amp U1. U1 is internally biased to present a 50-ohm load at the output.